

安装单位名称	电缆编号	电缆型号及芯数×截面	备用芯	起 点	终 点	长度(米)	备 注
35kV#1并联电容器 1DRQ	1DRQ-180	ZR-KVVP2-22-450/750-10×2.5	3	35kV #1电容器端子箱	35kV #1电容器1G隔离开关机构箱	15	
	1DRQ-181	ZR-VV22-0.6/1-4×6	0	35kV #1电容器端子箱	35kV #1电容器1G隔离开关机构箱	15	
	1DRQ-182	ZR-VV22-0.6/1-2×4	0	35kV #1电容器端子箱	35kV #1电容器1G隔离开关机构箱	15	
	1DRQ-184	ZR-KVVP2-22-450/750-10×2.5	2	35kV #1电容器端子箱	35kV #1电容器1G隔离开关机构箱	15	
	1DRQ-185	ZR-KVVP2-22-450/750-10×2.5	3	35kV #1电容器端子箱	35kV #1电容器1GD隔离开关机构箱	20	
	1DRQ-186	ZR-VV22-0.6/1-4×6	0	35kV #1电容器端子箱	35kV #1电容器1GD隔离开关机构箱	20	
	1DRQ-187	ZR-VV22-0.6/1-2×4	0	35kV #1电容器端子箱	35kV #1电容器1GD隔离开关机构箱	20	
	1DRQ-189	ZR-KVVP2-22-450/750-10×2.5	2	35kV #1电容器端子箱	35kV #1电容器1GD隔离开关机构箱	20	
	1DRQ-190A	ZR-KVVP2-22-450/750-4×4	2	35kV #1电容器端子箱	35kV #1电容器A相电流互感器	23	
	1DRQ-190B	ZR-KVVP2-22-450/750-4×4	2	35kV #1电容器端子箱	35kV #1电容器B相电流互感器	23	
	1DRQ-190C	ZR-KVVP2-22-450/750-4×4	2	35kV #1电容器端子箱	35kV #1电容器C相电流互感器	23	
	1DRQ-102	ZR-KVVP2-22-450/750-7×2.5	2	35kV #1电容器开关柜	35kV #1电容器端子箱	80	
	1DRQ-104	ZR-KVVP2-22-450/750-10×2.5	2	35kV #1电容器开关柜	35kV #1电容器端子箱	80	
	1DRQ-105	ZR-KVVP2-22-450/750-7×4	1	35kV #1电容器开关柜	35kV #1电容器端子箱	80	
	1DRQ-106	ZR-KVVP2-22-450/750-7×2.5	2	35kV #1电容器开关柜	35kV母线及公用测控柜	105	
	1DRQ-107	ZR-KVVP2-22-450/750-14×2.5	3	35kV #1电容器开关柜	35kV #1电容器端子箱	80	

安装单位名称	电缆编号	电缆型号及芯数×截面	备用芯	起 点	终 点	长度(米)	备 注
35kV#2并联电容器 2DRQ	2DRQ-180	ZR-KVVP2-22-450/750-10×2.5	3	35kV #2电容器端子箱	35kV #2电容器1G隔离开关机构箱	15	
	2DRQ-181	ZR-VV22-0.6/1-4×6	0	35kV #2电容器端子箱	35kV #2电容器1G隔离开关机构箱	15	
	2DRQ-182	ZR-VV22-0.6/1-2×4	0	35kV #2电容器端子箱	35kV #2电容器1G隔离开关机构箱	15	
	2DRQ-184	ZR-KVVP2-22-450/750-10×2.5	2	35kV #2电容器端子箱	35kV #2电容器1G隔离开关机构箱	15	
	2DRQ-185	ZR-KVVP2-22-450/750-10×2.5	3	35kV #2电容器端子箱	35kV #2电容器1GD隔离开关机构箱	20	
	2DRQ-186	ZR-VV22-0.6/1-4×6	0	35kV #2电容器端子箱	35kV #2电容器1GD隔离开关机构箱	20	
	2DRQ-187	ZR-VV22-0.6/1-2×4	0	35kV #2电容器端子箱	35kV #2电容器1GD隔离开关机构箱	20	
	2DRQ-189	ZR-KVVP2-22-450/750-10×2.5	2	35kV #2电容器端子箱	35kV #2电容器1GD隔离开关机构箱	20	
	2DRQ-190A	ZR-KVVP2-22-450/750-4×4	2	35kV #2电容器端子箱	35kV #2电容器A相电流互感器	23	
	2DRQ-190B	ZR-KVVP2-22-450/750-4×4	2	35kV #2电容器端子箱	35kV #2电容器B相电流互感器	23	
	2DRQ-190C	ZR-KVVP2-22-450/750-4×4	2	35kV #2电容器端子箱	35kV #2电容器C相电流互感器	23	
	2DRQ-102	ZR-KVVP2-22-450/750-7×2.5	2	35kV #2电容器开关柜	35kV #2电容器端子箱	72	
	2DRQ-104	ZR-KVVP2-22-450/750-10×2.5	2	35kV #2电容器开关柜	35kV #2电容器端子箱	72	
	2DRQ-105	ZR-KVVP2-22-450/750-7×4	1	35kV #2电容器开关柜	35kV #2电容器端子箱	72	
	2DRQ-106	ZR-KVVP2-22-450/750-7×2.5	2	35kV #2电容器开关柜	35kV母线及公用测控柜	105	
	2DRQ-107	ZR-KVVP2-22-450/750-14×2.5	3	35kV #2电容器开关柜	35kV #2电容器端子箱	72	

安装单位名称	电缆编号	电缆型号及芯数×截面	备用芯	起 点	终 点	长度(米)	备 注
35kV#3并联电容器 3DRQ	3DRQ-180	ZR-KVVP2-22-450/750-10×2.5	3	35kV #3电容器端子箱	35kV #3电容器1G隔离开关机构箱	15	
	3DRQ-181	ZR-VV22-0.6/1-4×6	0	35kV #3电容器端子箱	35kV #3电容器1G隔离开关机构箱	15	
	3DRQ-182	ZR-VV22-0.6/1-2×4	0	35kV #3电容器端子箱	35kV #3电容器1G隔离开关机构箱	15	
	3DRQ-184	ZR-KVVP2-22-450/750-10×2.5	2	35kV #3电容器端子箱	35kV #3电容器1G隔离开关机构箱	15	
	3DRQ-185	ZR-KVVP2-22-450/750-10×2.5	3	35kV #3电容器端子箱	35kV #3电容器1GD隔离开关机构箱	20	
	3DRQ-186	ZR-VV22-0.6/1-4×6	0	35kV #3电容器端子箱	35kV #3电容器1GD隔离开关机构箱	20	
	3DRQ-187	ZR-VV22-0.6/1-2×4	0	35kV #3电容器端子箱	35kV #3电容器1GD隔离开关机构箱	20	
	3DRQ-189	ZR-KVVP2-22-450/750-10×2.5	2	35kV #3电容器端子箱	35kV #3电容器1GD隔离开关机构箱	20	
	3DRQ-190A	ZR-KVVP2-22-450/750-4×4	2	35kV #3电容器端子箱	35kV #3电容器A相电流互感器	23	
	3DRQ-190B	ZR-KVVP2-22-450/750-4×4	2	35kV #3电容器端子箱	35kV #3电容器B相电流互感器	23	
	3DRQ-190C	ZR-KVVP2-22-450/750-4×4	2	35kV #3电容器端子箱	35kV #3电容器C相电流互感器	23	
	3DRQ-102	ZR-KVVP2-22-450/750-7×2.5	2	35kV #3电容器开关柜	35kV #3电容器端子箱	102	
	3DRQ-104	ZR-KVVP2-22-450/750-10×2.5	2	35kV #3电容器开关柜	35kV #3电容器端子箱	102	
	3DRQ-105	ZR-KVVP2-22-450/750-7×4	1	35kV #3电容器开关柜	35kV #3电容器端子箱	102	
	3DRQ-106	ZR-KVVP2-22-450/750-7×2.5	2	35kV #3电容器开关柜	35kV母线及公用测控柜	165	
	3DRQ-107	ZR-KVVP2-22-450/750-14×2.5	3	35kV #3电容器开关柜	35kV #3电容器端子箱	102	

安装单位名称	电缆编号	电缆型号及芯数×截面	备用芯	起 点	终 点	长度(米)	备 注
35kV#4并联电容器 4DRQ	4DRQ-180	ZR-KVVP2-22-450/750-10×2.5	3	35kV #4电容器端子箱	35kV #4电容器1G隔离开关机构箱	15	
	4DRQ-181	ZR-VV22-0.6/1-4×6	0	35kV #4电容器端子箱	35kV #4电容器1G隔离开关机构箱	15	
	4DRQ-182	ZR-VV22-0.6/1-2×4	0	35kV #4电容器端子箱	35kV #4电容器1G隔离开关机构箱	15	
	4DRQ-184	ZR-KVVP2-22-450/750-10×2.5	2	35kV #4电容器端子箱	35kV #4电容器1G隔离开关机构箱	15	
	4DRQ-185	ZR-KVVP2-22-450/750-10×2.5	3	35kV #4电容器端子箱	35kV #4电容器1GD隔离开关机构箱	20	
	4DRQ-186	ZR-VV22-0.6/1-4×6	0	35kV #4电容器端子箱	35kV #4电容器1GD隔离开关机构箱	20	
	4DRQ-187	ZR-VV22-0.6/1-2×4	0	35kV #4电容器端子箱	35kV #4电容器1GD隔离开关机构箱	20	
	4DRQ-189	ZR-KVVP2-22-450/750-10×2.5	2	35kV #4电容器端子箱	35kV #4电容器1GD隔离开关机构箱	20	
	4DRQ-190A	ZR-KVVP2-22-450/750-4×4	2	35kV #4电容器端子箱	35kV #4电容器A相电流互感器	23	
	4DRQ-190B	ZR-KVVP2-22-450/750-4×4	2	35kV #4电容器端子箱	35kV #4电容器B相电流互感器	23	
	4DRQ-190C	ZR-KVVP2-22-450/750-4×4	2	35kV #4电容器端子箱	35kV #4电容器C相电流互感器	23	
	4DRQ-102	ZR-KVVP2-22-450/750-7×2.5	2	35kV #4电容器开关柜	35kV #4电容器端子箱	93	
	4DRQ-104	ZR-KVVP2-22-450/750-10×2.5	2	35kV #4电容器开关柜	35kV #4电容器端子箱	93	
	4DRQ-105	ZR-KVVP2-22-450/750-7×4	1	35kV #4电容器开关柜	35kV #4电容器端子箱	93	
	4DRQ-106	ZR-KVVP2-22-450/750-7×2.5	2	35kV #4电容器开关柜	35kV母线及公用测控柜	165	
	4DRQ-107	ZR-KVVP2-22-450/750-14×2.5	3	35kV #4电容器开关柜	35kV #4电容器端子箱	93	

安装单位名称	电缆编号	电缆型号及芯数×截面	备用芯	起 点	终 点	长度(米)	备 注
35kV#5并联电容器 5DRQ	5DRQ-180	ZR-KVVP2-22-450/750-10×2.5	3	35kV #5电容器端子箱	35kV #5电容器1G隔离开关机构箱	15	
	5DRQ-181	ZR-VV22-0.6/1-4×6	0	35kV #5电容器端子箱	35kV #5电容器1G隔离开关机构箱	15	
	5DRQ-182	ZR-VV22-0.6/1-2×4	0	35kV #5电容器端子箱	35kV #5电容器1G隔离开关机构箱	15	
	5DRQ-184	ZR-KVVP2-22-450/750-10×2.5	2	35kV #5电容器端子箱	35kV #5电容器1G隔离开关机构箱	15	
	5DRQ-185	ZR-KVVP2-22-450/750-10×2.5	3	35kV #5电容器端子箱	35kV #5电容器1GD隔离开关机构箱	20	
	5DRQ-186	ZR-VV22-0.6/1-4×6	0	35kV #5电容器端子箱	35kV #5电容器1GD隔离开关机构箱	20	
	5DRQ-187	ZR-VV22-0.6/1-2×4	0	35kV #5电容器端子箱	35kV #5电容器1GD隔离开关机构箱	20	
	5DRQ-189	ZR-KVVP2-22-450/750-10×2.5	2	35kV #5电容器端子箱	35kV #5电容器1GD隔离开关机构箱	20	
	5DRQ-190A	ZR-KVVP2-22-450/750-4×4	2	35kV #5电容器端子箱	35kV #5电容器A相电流互感器	23	
	5DRQ-190B	ZR-KVVP2-22-450/750-4×4	2	35kV #5电容器端子箱	35kV #5电容器B相电流互感器	23	
	5DRQ-190C	ZR-KVVP2-22-450/750-4×4	2	35kV #5电容器端子箱	35kV #5电容器C相电流互感器	23	
	5DRQ-102	ZR-KVVP2-22-450/750-7×2.5	2	35kV #5电容器开关柜	35kV #5电容器端子箱	87	
	5DRQ-104	ZR-KVVP2-22-450/750-10×2.5	2	35kV #5电容器开关柜	35kV #5电容器端子箱	87	
	5DRQ-105	ZR-KVVP2-22-450/750-7×4	1	35kV #5电容器开关柜	35kV #5电容器端子箱	87	
	5DRQ-106	ZR-KVVP2-22-450/750-7×2.5	2	35kV #5电容器开关柜	35kV母线及公用测控柜	180	
	5DRQ-107	ZR-KVVP2-22-450/750-14×2.5	3	35kV #5电容器开关柜	35kV #5电容器端子箱	87	

安装单位名称	电缆编号	电缆型号及芯数×截面	备用芯	起 点	终 点	长度(米)	备 注
35kV#6并联电容器 6DRQ	6DRQ-180	ZR-KVVP2-22-450/750-10×2.5	3	35kV #6电容器端子箱	35kV #6电容器1G隔离开关机构箱	15	
	6DRQ-181	ZR-VV22-0.6/1-4×6	0	35kV #6电容器端子箱	35kV #6电容器1G隔离开关机构箱	15	
	6DRQ-182	ZR-VV22-0.6/1-2×4	0	35kV #6电容器端子箱	35kV #6电容器1G隔离开关机构箱	15	
	6DRQ-184	ZR-KVVP2-22-450/750-10×2.5	2	35kV #6电容器端子箱	35kV #6电容器1G隔离开关机构箱	15	
	6DRQ-185	ZR-KVVP2-22-450/750-10×2.5	3	35kV #6电容器端子箱	35kV #6电容器1GD隔离开关机构箱	20	
	6DRQ-186	ZR-VV22-0.6/1-4×6	0	35kV #6电容器端子箱	35kV #6电容器1GD隔离开关机构箱	20	
	6DRQ-187	ZR-VV22-0.6/1-2×4	0	35kV #6电容器端子箱	35kV #6电容器1GD隔离开关机构箱	20	
	6DRQ-189	ZR-KVVP2-22-450/750-10×2.5	2	35kV #6电容器端子箱	35kV #6电容器1GD隔离开关机构箱	20	
	6DRQ-190A	ZR-KVVP2-22-450/750-4×4	2	35kV #6电容器端子箱	35kV #6电容器A相电流互感器	23	
	6DRQ-190B	ZR-KVVP2-22-450/750-4×4	2	35kV #6电容器端子箱	35kV #6电容器B相电流互感器	23	
	6DRQ-190C	ZR-KVVP2-22-450/750-4×4	2	35kV #6电容器端子箱	35kV #6电容器C相电流互感器	23	
	6DRQ-102	ZR-KVVP2-22-450/750-7×2.5	2	35kV #6电容器开关柜	35kV #6电容器端子箱	78	
	6DRQ-104	ZR-KVVP2-22-450/750-10×2.5	2	35kV #6电容器开关柜	35kV #6电容器端子箱	78	
	6DRQ-105	ZR-KVVP2-22-450/750-7×4	1	35kV #6电容器开关柜	35kV #6电容器端子箱	78	
	6DRQ-106	ZR-KVVP2-22-450/750-7×2.5	2	35kV #6电容器开关柜	35kV母线及公用测控柜	180	
	6DRQ-107	ZR-KVVP2-22-450/750-14×2.5	3	35kV #6电容器开关柜	35kV #6电容器端子箱	78	

安装单位名称	电缆编号	电缆型号及芯数×截面	备用芯	起 点	终 点	长度(米)	备 注
#1站用变35kV开关柜	41B-101	ZR-KVVP2-22-450/750-4×4	2	#1站用变35kV开关柜	#1站用变本体端子箱	65	
41B	41B-102	ZR-KVVP2-22-450/750-14×2.5	4	#1站用变35kV开关柜	#1站用变本体端子箱	65	
	41B-103	ZR-KVVP2-22-450/750-7×2.5	2	#1站用变35kV开关柜	站控层公用测控柜	163	
	41B-105	ZR-KVVP2-22-450/750-4×2.5	1	#1站用变本体端子箱	站控层公用测控柜	150	
	41B-108	ZR-KVVP2-22-450/750-4×2.5	2	#1站用变35kV开关柜	站控层公用测控柜	163	
	41B-109	ZR-KVVP2-22-450/750-4×2.5	2	#1站用变35kV开关柜	#1站用变进线柜	185	
#2站用变35kV开关柜	42B-101	ZR-KVVP2-22-450/750-4×4	2	#2站用变35kV开关柜	#2站用变本体端子箱	60	
42B	42B-102	ZR-KVVP2-22-450/750-14×2.5	4	#2站用变35kV开关柜	#2站用变本体端子箱	60	
	42B-103	ZR-KVVP2-22-450/750-7×2.5	2	#2站用变35kV开关柜	站控层公用测控柜	177	
	42B-105	ZR-KVVP2-22-450/750-4×2.5	1	#2站用变本体端子箱	站控层公用测控柜	164	
	42B-108	ZR-KVVP2-22-450/750-4×2.5	2	#2站用变35kV开关柜	站控层公用测控柜	177	
	42B-109	ZR-KVVP2-22-450/750-4×2.5	2	#2站用变35kV开关柜	#2站用变进线柜	200	
#0站用变35kV开关柜	40B-101	ZR-KVVP2-22-450/750-4×4	2	#0备用变35kV开关柜	#0站用变本体端子箱	70	
40B	40B-102	ZR-KVVP2-22-450/750-10×2.5	2	#0备用变35kV开关柜	#0站用变本体端子箱	70	
	40B-103	ZR-KVVP2-22-450/750-7×2.5	2	#0备用变35kV开关柜	站控层公用测控柜	172	
	40B-105	ZR-KVVP2-22-450/750-4×2.5	1	#0备用变本体端子箱	站控层公用测控柜	155	
	40B-108	ZR-KVVP2-22-450/750-7×2.5	3	#0备用变35kV开关柜	#0站用变进线柜	195	

安装单位名称	电缆编号	电缆型号及芯数×截面	备用芯	起 点	终 点	长度(米)	备 注
0母电压互感器	0UYH-101	ZR-KVVP2-22-450/750-4×4	0	0母电压互感器开关柜	站控层公用测控柜	195	
0UYH	0UYH-102	ZR-KVVP2-22-450/750-10×2.5	2	0母电压互感器开关柜	站控层公用测控柜	195	
#1进线站用柜	1ZYB-101	ZR-KVVP2-22-450/750-4×4	0	#1进线站用柜	站控层公用测控柜	50	
1ZYB	1ZYB-102	ZR-KVVP2-22-450/750-14×2.5	4	#1进线站用柜	站控层公用测控柜	50	
	1ZYB-103	ZR-KVVP2-22-450/750-4×2.5	1	#1进线站用柜	站控层公用测控柜	50	
	1ZYB-104	ZR-KVVP2-22-450/750-4×4	0	#1进线站用柜	站控层公用测控柜	50	
	1ZYB-105	ZR-KVVP2-22-450/750-4×4	2	#1进线站用柜	站控层公用测控柜	50	
#2进线站用柜	2ZYB-101	ZR-KVVP2-22-450/750-4×4	2	#2进线站用柜	站控层公用测控柜	55	
2ZYB	2ZYB-102	ZR-KVVP2-22-450/750-14×2.5	4	#2进线站用柜	站控层公用测控柜	55	
	2ZYB-103	ZR-KVVP2-22-450/750-4×2.5	1	#2进线站用柜	站控层公用测控柜	55	
	2ZYB-104	ZR-KVVP2-22-450/750-4×4	0	#2进线站用柜	站控层公用测控柜	55	
	2ZYB-105	ZR-KVVP2-22-450/750-4×4	2	#2进线站用柜	站控层公用测控柜	55	
#0进线站用柜	0ZYB-101	ZR-KVVP2-22-450/750-4×4	0	#0进线站用柜	站控层公用测控柜	53	
0ZYB	0ZYB-103	ZR-KVVP2-22-450/750-4×2.5	1	#0进线站用柜	站控层公用测控柜	53	
	0ZYB-104	ZR-KVVP2-22-450/750-4×2.5	1	#0进线站用柜	站控层公用测控柜	53	
	0ZYB-105	ZR-KVVP2-22-450/750-4×4	2	#0进线站用柜	站控层公用测控柜	53	
	0ZYB-106	ZR-KVVP2-22-450/750-4×2.5	1	#0进线站用柜	站控层公用测控柜	53	
	0ZYB-108	ZR-KVVP2-22-450/750-4×2.5	1	#0进线站用柜	站控层公用测控柜	53	